

PATENTED REFILLABLE CARTRIDGE (ARC) User's Guide

(For Sponge-Less Refillable Inkjet Cartridge with Reset-Able Chip)

Please read instructions carefully before using!

A. Usage of ARC ink cartridge (Use it as OEM cartridge):

1. Remove the cartridge from plastic wrapper. Shake before use.
2. Peel off the "PULL" label on top of the cartridge covering the vent hole. Pull it just before using the cartridge. (Fig. 1)
3. Follow the instructions of your printer's User Manual on how to install new cartridges.
4. Push the cartridge all the way down into the cartridge carriage and make sure it is locked in. (fig. 2)
5. Perform a nozzle check after installing a new cartridge. If necessary perform a head cleaning.
6. If prompted on PC "Different from OEM cartridge" or "Non-genuine ink", click "Yes" or "Continue".
7. If your printer does not recognize the new installed cartridge, remove cartridge from printer, turn printer off for 1 minute than turn it back on and reinstall the cartridge.
8. If this is the first time using our patented cartridge, perform 3 cleaning cycles to flush out any old existing ink in your printer.

B. Refilling our ARC ink cartridge:

1. What's needed? Ink refill kit (sold separately) or ink, syringe, needle and colored rubber stopper (included with cartridge) (Fig. 3)
2. Using adhesive tape, firmly seal the vent hole on top of the cartridge to prevent ink leakage while refilling. (Fig. 4)
3. Pull off the colored rubber stopper from cartridge. (Fig. 5)
4. Using a syringe and needle withdraw ink from bottle. (Fig. 6)
5. Slowly using a syringe and needle, inject up to 16ml of ink into cartridge or until almost full. **Do not over fill.** (fig. 7-8)
6. Re-attach colored rubber stopper to seal the refill hole. (Fig. 9)
7. Remove adhesive tape covering the vent hole. (Fig. 10)
8. Your ARC cartridge will auto-reset once re-installed displaying ink level. Your refillable cartridge can be reused many times.

Caution: Do not touch the ARC chip to avoid printing malfunction.

